

LCD STARTER KIT STARTSP10Q010

This starter kit shall provide customers with the means to interface their system to a Hitachi SP10Q010, SP10Q010-T, SP10Q010-TZA or SP10Q010-ZZA LCD module.

For the full specification for your specific display please download a copy from our website on <http://www.hitachi-displays-eu.com>

For a suitable LCD controller please refer to the enclosed LCD controller reference list or visit our website.

For more information please visit our website via the URL above or contact your Hitachi distributor or sales office.

LIST OF CONTENTS

Qty	Item
1	Interface board STARTSP10Q010
1	Interface board STARTSP10Q010 PCB layout and pin assignment
1	Starter Kit Assembly Instructions
1	LCD Handling Precautions
1	LCD Controller Reference List
1	Connector Supplier List

ASSEMBLY INSTRUCTIONS

- Insert the LCD module flat flexible cable into the housing, CN2, connector on the interface board.
- Connect the correct signals to the input connector, CN1, of the interface board according to the display specification and pin assignment.

IMPORTANT NOTES

1. **USE CORRECT POWER-UP SEQUENCE OF DATA**
2. **DO NOT APPLY POWER TO INVERTER BOARD WITHOUT CFL CONNECTED. THIS WILL RESULT IN INVERTER FUSE FAILURE**
3. **WHEN POWERED-UP THE INVERTER BOARD GENERATES HIGH VOLTAGES USE CAUTION WHEN ON.**