

TPS2375EVM

***Power-Over-Ethernet Powered Device (PD)
Evaluation Module***

User's Guide

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products		Applications	
Amplifiers	amplifier.ti.com	Audio	www.ti.com/audio
Data Converters	dataconverter.ti.com	Automotive	www.ti.com/automotive
DSP	dsp.ti.com	Broadband	www.ti.com/broadband
Interface	interface.ti.com	Digital Control	www.ti.com/digitalcontrol
Logic	logic.ti.com	Military	www.ti.com/military
Power Mgmt	power.ti.com	Optical Networking	www.ti.com/opticalnetwork
Microcontrollers	microcontroller.ti.com	Security	www.ti.com/security
		Telephony	www.ti.com/telephony
		Video & Imaging	www.ti.com/video
		Wireless	www.ti.com/wireless

Mailing Address: Texas Instruments
Post Office Box 655303 Dallas, Texas 75265

Copyright © 2004, Texas Instruments Incorporated

EVM IMPORTANT NOTICE

Texas Instruments (TI) provides the enclosed product(s) under the following conditions:

This evaluation kit being sold by TI is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not considered by TI to be fit for commercial use. As such, the goods being provided may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety measures typically found in the end product incorporating the goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may not meet the technical requirements of the directive.

Should this evaluation kit not meet the specifications indicated in the EVM User's Guide, the kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods. Please be aware that the products received may not be regulatory compliant or agency certified (FCC, UL, CE, etc.). Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge.

EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

TI currently deals with a variety of customers for products, and therefore our arrangement with the user **is not exclusive**.

TI assumes **no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein**.

Please read the EVM User's Guide and, specifically, the EVM Warnings and Restrictions notice in the EVM User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact the TI application engineer.

Persons handling the product must have electronics training and observe good laboratory practice standards.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used.

Mailing Address:

Texas Instruments
Post Office Box 655303
Dallas, Texas 75265

EVM WARNINGS AND RESTRICTIONS

It is important to operate this EVM within the input voltage range of 0 V and 57 V and the output voltage range of 0 V and 57 V.

Exceeding the specified input range may cause unexpected operation and/or irreversible damage to the EVM. If there are questions concerning the input range, please contact a TI field representative prior to connecting the input power.

Applying loads outside of the specified output range may result in unintended operation and/or possible permanent damage to the EVM. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative.

During normal operation, some circuit components may have case temperatures greater than 85°C. The EVM is designed to operate properly with certain components above 85°C as long as the input and output ranges are maintained. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors. These types of devices can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during operation, please be aware that these devices may be very warm to the touch.

Mailing Address:

Texas Instruments
Post Office Box 655303
Dallas, Texas 75265

Read This First

About This Manual

This user's guide describes the TPS2375 HPA028 evaluation module (EVM). It contains the EVM schematic, bill of materials, assembly drawing, and top and bottom board layouts.

How to Use This Manual

This document contains the following chapters:

- ☐ Chapter 1 — Introduction
- ☐ Chapter 2 — Hardware Overview
- ☐ Chapter 3 — EVM Operation
- ☐ Chapter 4 — Bill of Materials
- ☐ Chapter 5 — EVM Schematic and Layout

Information About Cautions and Warnings

This book may contain cautions and warnings.

This is an example of a caution statement.

A caution statement describes a situation that could potentially damage your software or equipment.

This is an example of a warning statement.

A warning statement describes a situation that could potentially cause harm to you.

The information in a caution or a warning is provided for your protection. Please read each caution and warning carefully.

Related Documentation From Texas Instruments

TPS2375 Power Over Ethernet Powered Device Power Switch – data sheet, (SLUSxxx).

Contents

1	Introduction	1-1
2	Hardware Overview	2-1
3	EVM Operation	3-1
3.1	Setup	3-2
3.2	Jumpers	3-2
3.3	Test Points	3-2
3.4	Features	3-3
3.4.1	Input and Output Capacitors	3-3
3.4.2	Gigabit Ethernet Application	3-3
3.4.3	Dual DUT Footprint	3-3
3.4.4	Power-Good Indicator	3-3
3.4.5	Connect DC/DC Converter	3-3
3.4.6	Available Spare Footprints	3-4
4	Bill of Materials	4-1
4.1	Bill of Materials	4-2
5	Schematic and Layout	5-1
5.1	TPS2375 EVM Schematic	5-2
5.2	Layouts	5-3

Figures

5-1	Top Assembly Layer	5-4
5-2	Bottom Assembly Layer	5-5

Introduction

This User's Guide describes the setup and operation of the TPS2375 HPA028 evaluation module (EVM). Information and instructions presented throughout this document assumes user familiarity with the IEEE 802.3af Specification for Power Over Ethernet.

(This page has been left blank intentionally.)

Hardware Overview

The HPA028 EVM features the TPS2375 made by Texas Instruments Incorporated. The EVM is designed to look like the front end of any Power Over Ethernet (PoE) Powered Device (PD) module. An RJ-45 connector is provided to connect directly to an Ethernet cable having a Power Sourcing Equipment (PSE) driving it on the other end. The EVM also accepts power applied using a stand-alone power supply.

According to the IEEE 802.3af specification, the PD module must provide the circuitry needed to be detected by the PSE as it polls the Ethernet links. The IEEE 802.3af specification also allows the option for the PD to provide classification as to the amount of power needed by the PD Module. The HPA028 EVM with the TPS2375 provides all the necessary hardware to provide detection and classification.

The HPA028 EVM also has connections for connecting an external DC/DC converter to convert the 48 V down to the voltages needed for the Ethernet Module.

(This page has been left blank intentionally.)

EVM Operation

This chapter discusses the EVM operation including setup, jumpers, test points and features.

Topic	Page
3.1 Setup	3-2
3.2 Jumpers	3-2
3.3 Test Points	3-2
3.4 Features	3-3

3.1 Setup

The HPA028 EVM is designed to allow evaluation of the TPS2375 device. Test points and jumpers are provided to facilitate testing and configuration. At the factory, JP0, JP5, JP6 (between pin 2 and pin 3), and JP7 will be installed.

3.2 Jumpers

JP0, JP1, JP2, JP3, JP4	Selects the Classification Resistor
JP5	Used to pass power from the input
JP6	Selects ground connection when applying an external power supply on J4 or J5
JP7	Used to connect a 4.7 k Ω resistor as the load of the PD, that may be used to maintain the power signature for the PD

3.3 Test Points

Test Points	Description
TP1	Test point for TPS2375 ILIM pin
TP2	Test point for TPS2375 CLASS pin
TP3	Test point for TPS2375 DET pin
TP4	Test point for TPS2375 VSS pin
TP5	Test point for TPS2375 RTN pin
TP6	Test point for TPS2375 PG pin
TP7	Test point for TPS2375 N/C pin (or the UVLO pin if the DUT is TPS2376)
TP8	Test point for TPS2375 VDD pin
TP9	Test point for the 48 volts after the diode-bridges (BRG1 and BRG2)
TP10	Test point for the 48-V return on the Power Sourcing Equipment side
TP11, TP12	Test point for probing the signal-pair 48-V inputs coming from the RJ-45 connector or for connecting an external 48-V power supply.
TP13, TP14	Test point for probing the spare pair 48-V inputs coming from the RJ-45 connector or for connecting an external 48V power supply
TP15, TP16, TP17	Test points (only TP17 installed) for probing the 48-V supply to the load (DC/DC Converter), or for connecting additional load resistors or capacitors
TP18, TP19, TP20	Test points (only TP20 installed) for probing the 48-V RTN or for connecting additional load resistors or capacitors

3.4 Features

The HPA028 EVM facilitates easy evaluation of the TPS2375 PD controller. The EVM features are described in this section.

3.4.1 Input and Output Capacitors

The input capacitor of the TPS2375 PD controller is specified by the IEEE802.3af standard. C1, a 0.1 μF $\pm 10\%$ ceramic capacitor, meets the IEEE specification, so no additional input capacitor can be added.

Two spare capacitor footprints (C2 and C4) on the EVM are provided for adding additional load capacitance on the output of the TPS2375. When adding any of the large aluminum electrolytic capacitors, care should be taken to select capacitors with an appropriate voltage rating, and to observe the polarity marking on the PCB silkscreen. The recommended voltage rating for these capacitors is 100 V.

3.4.2 Gigabit Ethernet Application

The EVM only allows 10/100BASE data rate transmission due to the magnetic limitation of T1 (H2019). To evaluate the EVM with a Gigabit Ethernet network, remove T1 (H2019), R13, R14, R15, and R16, and place a Gigabit transformer (H5007) on the T2 footprint.

3.4.3 Dual DUT Footprint

Since the TPS2375 is available in both SO-8 and TSSOP-8 packages, two footprints (U1 and U2) are provided to test either package. The EVM is supplied with the SO-8 package device (TPS2375D) on the U2 footprint. To evaluate the TSSOP package, remove the device from U2 and solder a TSSOP-8 package device (TPS2375PW) on the U1 footprint.

Warning

Do not have devices on both U1 and U2 at the same time.

3.4.4 Power-Good Indicator

The PG LED (D3) Indicator illuminates when the TPS2375 turns on.

3.4.5 Connect DC/DC Converter

A block connector (J2) is provided to connect downstream DC/DC converters if desired. Test points (such as TP17 and TPS20) are not recommended for connecting loads.

3.4.6 Available Spare Footprints

- ☐ TP15, TP16 – extra test points for 48-V positive rail (VDD)
- ☐ TP18, TP19 – extra test points for 48-V load-side return (RTN)
- ☐ J5 – Jack for connecting an external wall-mounted transformer power supply;
- ☐ R8, R9 – To set the UVLO threshold if a TPS2376 is under test;
- ☐ R12 – To reduce the load resistance (or increase the load current) on the TPS2375 output if desired.

Bill of Materials

This chapter contains the bill of materials for the TPS2375EVM.

Topic	Page
4.1 Bill of Materials	4-2

4.1 Bill of Materials

Count	RefDes	Description	Size	Part Number	MFR
1	D1	Diode, 58-V TVS,	SMA	SMAJ58A	Vishay
1	D2	Diode, 5.6 V Zener	D0-219AB	BZD27C5V6P	Vishay
1	D3	LED, SMD, Green, PLCC2-Package	1210	TLMG3102	Vishay
3	D4, D5, D6	Bridge Rectifier, 100 V, 1A, SMD	DF-S	DF01S	Vishay
1	C1	Capacitor, 0.1 μ F, 100-V, X7R, 10%	1210	VJ1210Y104KXBXX	Vishay
1	C3	Capacitor 33- μ F, 100-V, 20%	TH	2222 038 59339	Vishay
0	C2, C4	Capacitor 33- μ F, 100-V, 20%	TH	2222 038 59339	Vishay
2	J1, J3	Connector, Jack, Modular, 8 POS	0.705 $\times$ 0.82	520252	AMP
1	J2	Terminal Block, 6 pin, 10-A, 200 mil space	1.225 $\times$ 0.401	999394	Weidmuller
1	J4	Header, 2-pin, 100 mil spacing		PTC36SAAN	Sullins
0	J5	Connector, 2.1 mm, DC Jack w/ Switch, SM	0.57 $\times$ 0.35	RASM 722	Switchcraft
7	JP0, JP1, JP2, JP3, JP4, JP5, JP7	Header, 2-pin, 100 mil spacing		PTC36SAAN	Sullins
1	JP6	Header, 3-pin, 100mil spacing		PTC36SAAN	Sullins
1	Q1	MOSFET, N-ch, 60-V, 115-mA, 1.2 Ω	SOT23	2N7002 E	Vishay
1	R0	Resistor, Chip, 4.42K Ω , 1/16-W, 1%	603	CRCW06034421F	Vishay
1	R1	Resistor, Chip, 95 Ω , 1/8W, 1%	1206	CRCW1206953F	Vishay
1	R2	Resistor, Chip, 549 Ω , 1/8W, 1%	1206	CRCW1206549F	Vishay
1	R3	Resistor, Chip, 357 Ω , 1/2 W, 1%	2010	CRCW20103570F	Vishay
1	R4	Resistor, Chip, 255 Ω , 1/2 W, 1%	2010	CRCW20102550F	Vishay
1	R5	Resistor, Chip, 24.9 K Ω , 1/10-W, 1%	805	CRCW08052492F	Vishay
1	R6	Resistor, Chip, 178 K Ω , 1/10-W, 1%	805	Std	Std
1	R7	Resistor, Chip, 100 K Ω , 1/10-W, 5%	805	CRCW08051003J	Vishay
0	R8	Resistor, Chip, 138 K Ω , 1/10W, 5%	805	CRCW0805-xxx-J	Vishay
0	R9	Resistor, Chip, 10 K Ω , 1/10W, 5%	805	CRCW0805-xxx-J	Vishay
1	R10	Resistor, Chip, 20 K Ω , 1/8-W, 5%	1206	Std	Std
1	R11	Resistor, Chip, 4.7 K Ω , 1-W, 1%	2512	WSL-2512-4701 1%	Vishay
0	R12	Resistor, Chip, xx Ω , 1-W, 1%	2512	WSL-2512-xx 1%	Vishay
4	R13, R14, R15, R16	Resistor, Chip, 0 Ω , 1/16-W, x%	402	Std	Std
1	T1	16-PIN SOIC Xfmr, Center-tapped,	16-SOIC	H2019	Pulse
0	T2	24-pin SOIC Magnetics Modules, Ratio 1:1	SO24	H5007	Pulse
12	TP1, TP2, TP3, TP6, TP7, TP8, TP9, TP11, TP12, TP13, TP14, TP17	Test Point, Red, 1 mm	0.038	07WX9455	Farnell
0	TP15, TP16	Test Point, Red, 1 mm	0.038	07WX9455	Farnell
4	TP4, TP5, TP10, TP20	Test Point, Black, 1 mm	0.038	240-333	Farnell
0	TP18, TP19	Test Point, Black, 1 mm	0.038	240-333	Farnell

Count	RefDes	Description	Size	Part Number	MFR
0	U1	IC, TPS2375 Powered Device Controller	TSSOP-8	TPS2375PW	TI
1	U2	IC, TPS2375 Powered Device Controller	SO-8	TPS2375D	TI
4	Shunt	on JP0,JP5, JP6, & JP7, 2-pin, 0.100 cntr		STC02SYAN	Sullins
1	--	PCB, 4.316 In x 2.890 In x 0.062 In		HPA028	Any
4		Rubber bumper		2566	SPC Tech.


- Notes:**
- 1) These assemblies are ESD sensitive, ESD precautions must be observed.
 - 2) These assemblies must be clean and free from flux and all contaminants. Use of no clean flux is not acceptable.
 - 3) These assemblies must comply with workmanship standards IPC-A-610 Class 2.
 - 4) Reference designators marked with an asterisk (**) cannot be substituted. All other components can be substituted with equivalent MFG's components.

Schematic and Layout

This chapter contains the schematic and layout for the TPS2375EVM.

Topic	Page
5.1 Schematic	5-2
5.2 Layouts	5-3

5.1 TPS2375 EVM Schematic

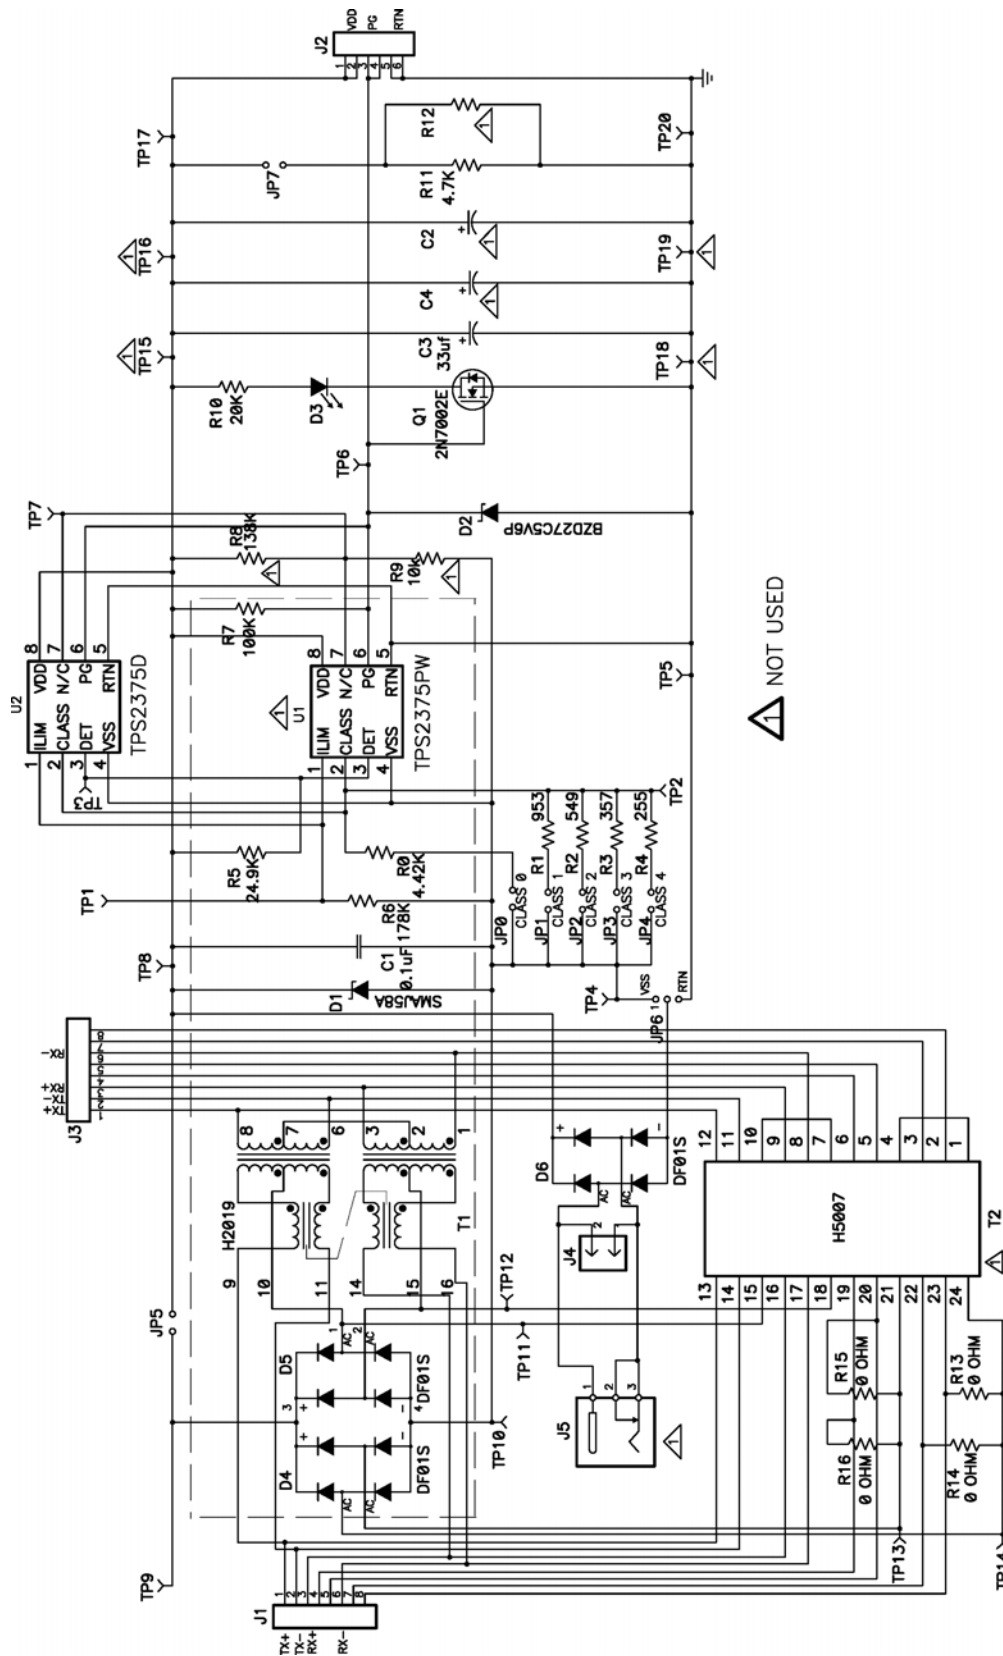

5.2 Layouts

The board layout is shown on the following pages.

Figure 5–1. Top Assembly Layer

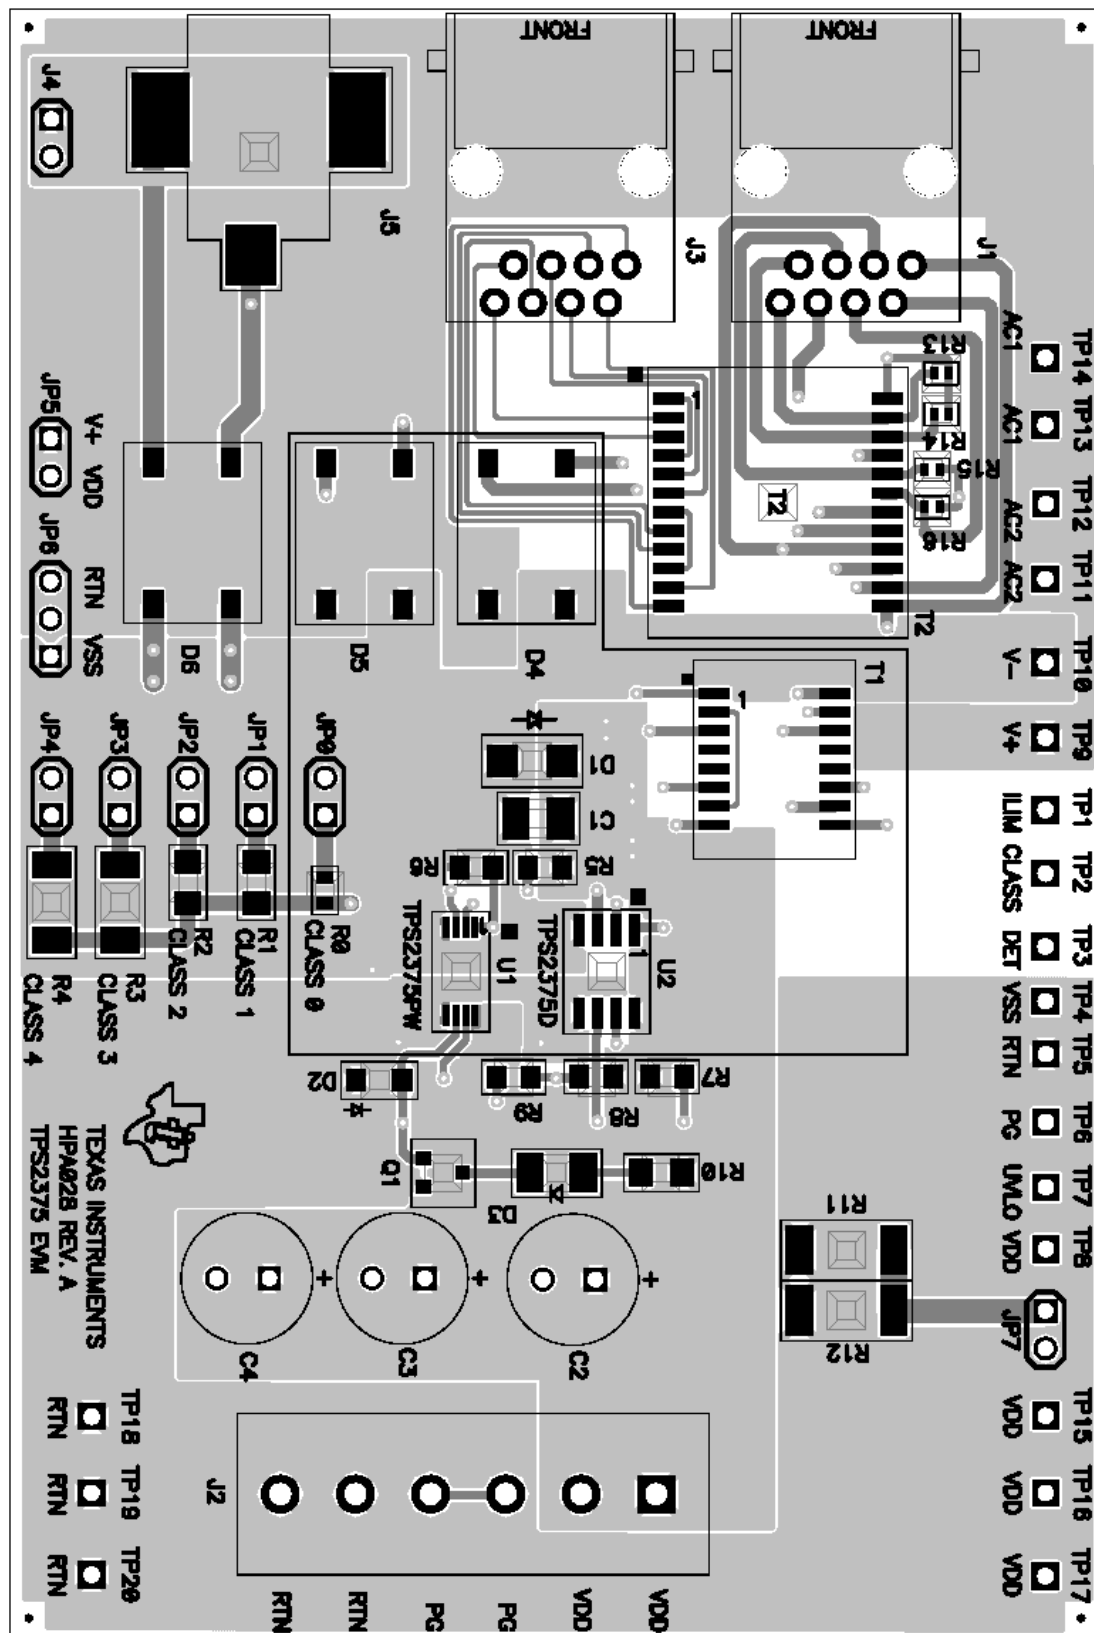


Figure 5-2. Bottom Assembly Layer

